


(vedi tabella)

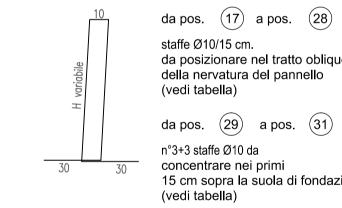


da posizionare nel tratto obliquo della nervatura del pannello (vedi tabella)									
da pos. (29) a pos. (31)									
n°3+3 staffe Ø10 da concentrare nei primi 15 cm sopra la suola di fondazione									

staffe Ø10/15 cm.


(vedi tabella)

	Н	1	2	2')	3	3')	4	4')	5	(5')	6	7	8	9
scatola s=35 cm	385	n=1+1 Ø6-20x20 H=342 L=242	n=2+2 Ø 16 sv=397	n°=1+1 Ø8 sv=342	n=2+2 Ø 10 sv=160	n=8 Ø12 sv=108	n=3+3 Ø6 sv=63	n=12 Ø10 Passo 20 sv=93	n=5 Ø8 sv=242	n°=3 Ø8 Passo 120 sv=165	n=2+2 Ø16 sv=254	n=2+2 Ø 26 sv=455	n=2+2 Ø 26 sv=275	n=2+2 Ø 24 sv=173

PARTICOLARE SPONDE LATERALI

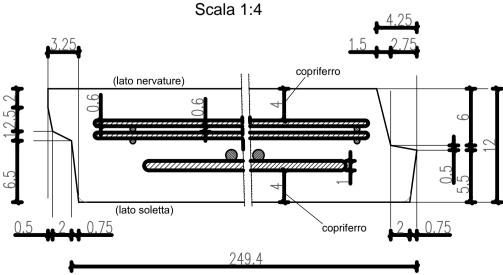



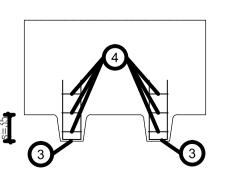

POS.	n°	Ø	h	sv.	POS.	n°	Ø	h	sv.
15)	3+3	10	24	98	25)	1+1	10	50	150
16)	15+15	10	24	98	26)	1+1	10	53	156
17)	1+1	10	26	102	27)	1+1	10	56	162
18)	1+1	10	29	108	28)	1+1	10	59	168
19	1+1	10	32	114	29	1+1	10	60	170
20	1+1	10	35	120	30	1+1	10	61	172
21)	1+1	10	38	126	31)	1+1	10	62	174
22	1+1	10	41	132					
23	1+1	10	44	138					
24)	1+1	10	47	144					

TABELLA STAFFE

ARMATURA TIPOLOGICA VALIDA PER I MURI





